
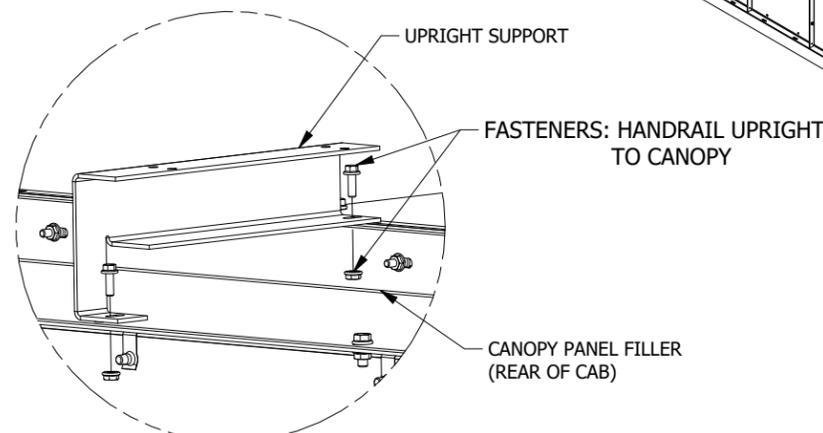


FREIGHT CAB CAR TOP HANDRAIL INSTALL


STEP 1.

- IF REAR WALL HAS A HANDRAIL, INSTALL UPRIGHT SUPPORTS (NOT NEEDED FOR FRONT AND REAR OPEN CAR)
- BOLT UPRIGHTS TO UPRIGHT SUPPORT (REAR WALL) OR CANOPY PANEL FLANGES (SIDE WALL)

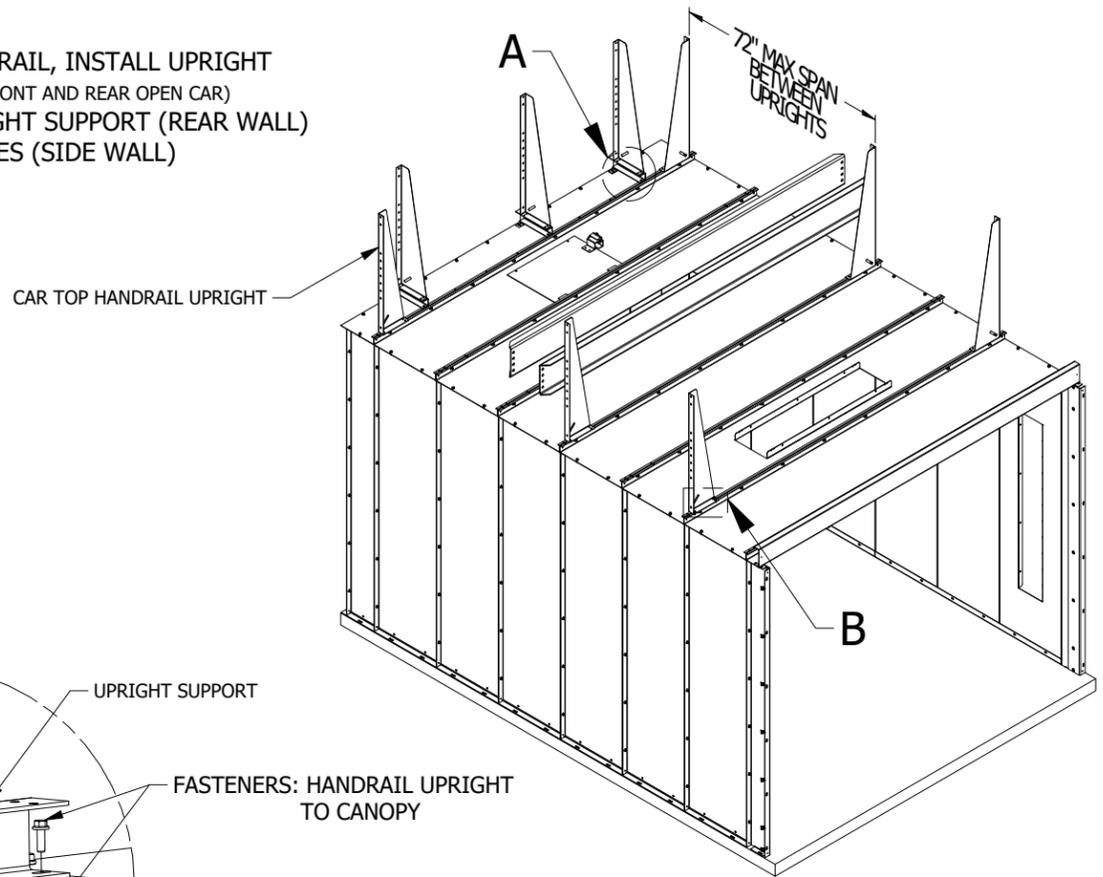


UPRIGHT SUPPORTS DETAIL A
REAR CAB VIEW

- FREIGHT CAB FASTENER PACK:**
- HANDRAIL UPRIGHT TO CANOPY

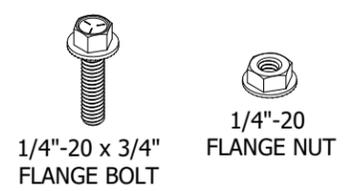

1/4"-20 x 3/4"
FLANGE BOLT

1/4"-20
FLANGE NUT

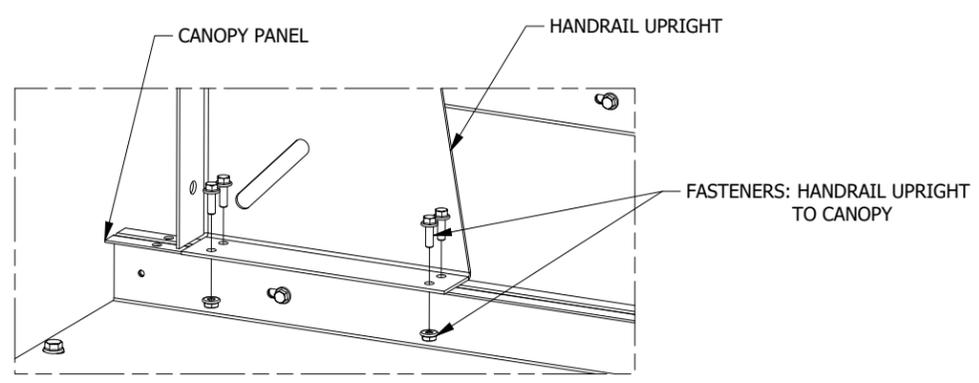



CAR TOP HANDRAIL UPRIGHT
TO CANOPY DETAIL B

-VIEWS DO NOT REPRESENT ACTUAL CAB.
 -SEE CAB LAYOUT DRAWING TO DETERMINE ACTUAL CAB CONFIGURATION. CONTACT MEI FOR CAB MODEL. (WORKS ON CELL PHONE AND TABLETS)
 -FASTENERS SHOWN ARE STANDARD. (FASTENERS MAY DIFFER DUE TO CAB DESIGN NEEDS)
 -SCAN OR CLICK QR CODES ON PAGE 2 TO VIEW INSTALLATION VIDEO PERTAINING TO YOUR CAB TYPE.

STEP 2.


- FASTEN UNISTRUT RAILING TO UPRIGHTS ADJUST HEIGHT OF MIDDLE RAILING TO AVOID CROSSHEAD IF POSSIBLE. OTHERWISE THE UNISTRUT WILL HAVE TO BE CUT AS NEEDED.

NOTE: UNISTRUT COMES IN 120" LENGTHS A SPLICE MAY BE NEEDED DEPENDING ON THE CAB. SEE SPLICE DETAIL IF APPLICABLE

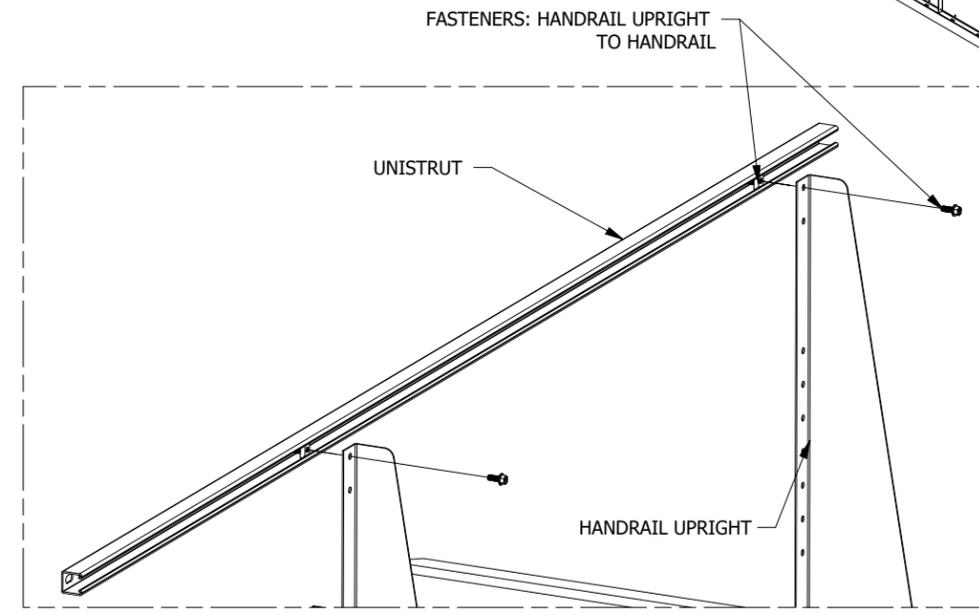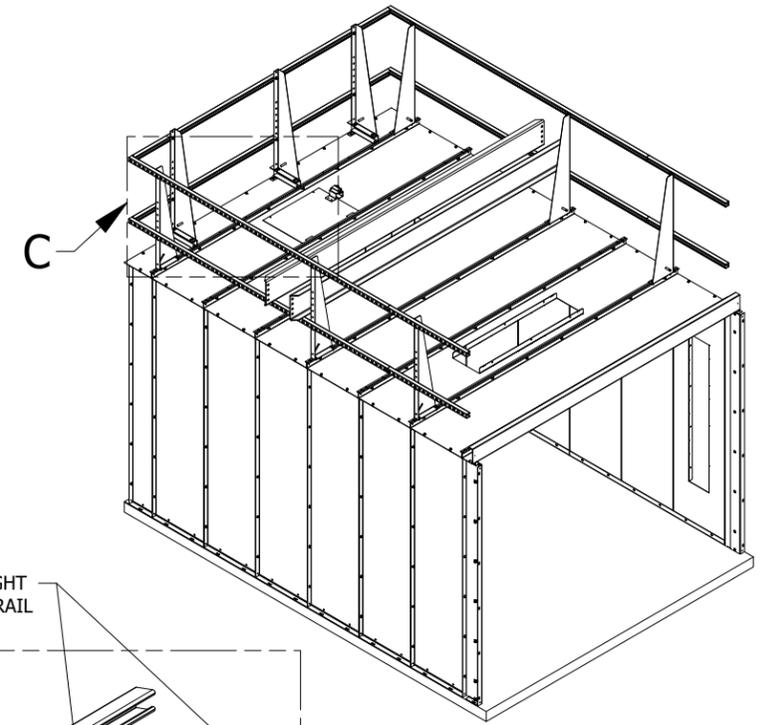


HANDRAIL UNISTRUT TO UPRIGHT DETAIL C

- FREIGHT CAB FASTENER PACK:**
- HANDRAIL UPRIGHT TO HANDRAIL

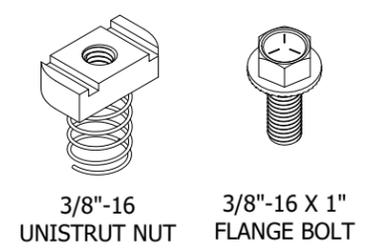


3/8"-16
UNISTRUT NUT

3/8"-16 X 1"
FLANGE BOLT

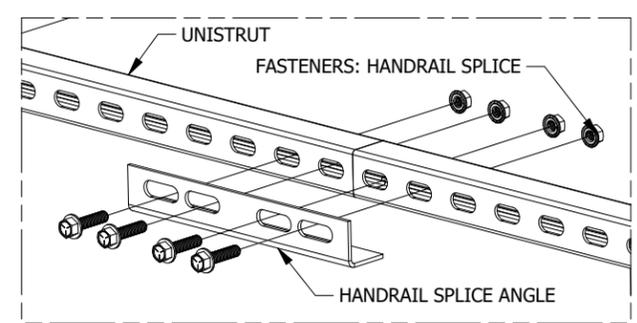

HANDRAIL SPLICE DETAIL
(IF APPLICABLE)

- FREIGHT CAB FASTENER PACK:**
- HANDRAIL SPLICE

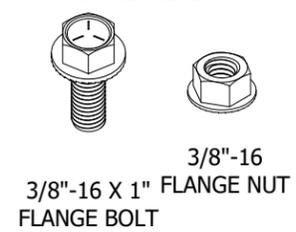



3/8"-16
3/8"-16 X 1" FLANGE NUT
FLANGE BOLT

FREIGHT CAB CAR TOP HANDRAIL INSTALL

-VIEWS DO NOT REPRESENT ACTUAL CAB.
 -SEE CAB LAYOUT DRAWING TO DETERMINE ACTUAL CAB CONFIGURATION. CONTACT MEI FOR CAB MODEL. (WORKS ON CELL PHONE AND TABLETS)
 -FASTENERS SHOWN ARE STANDARD. (FASTENERS MAY DIFFER DUE TO CAB DESIGN NEEDS)
 -SCAN OR CLICK QR CODES ON PAGE 2 TO VIEW INSTALLATION VIDEO PERTAINING TO YOUR CAB TYPE.

STEP 3.

- CLIP SIDE AND REAR KICKPLATES TO UPRIGHT SUPPORTS

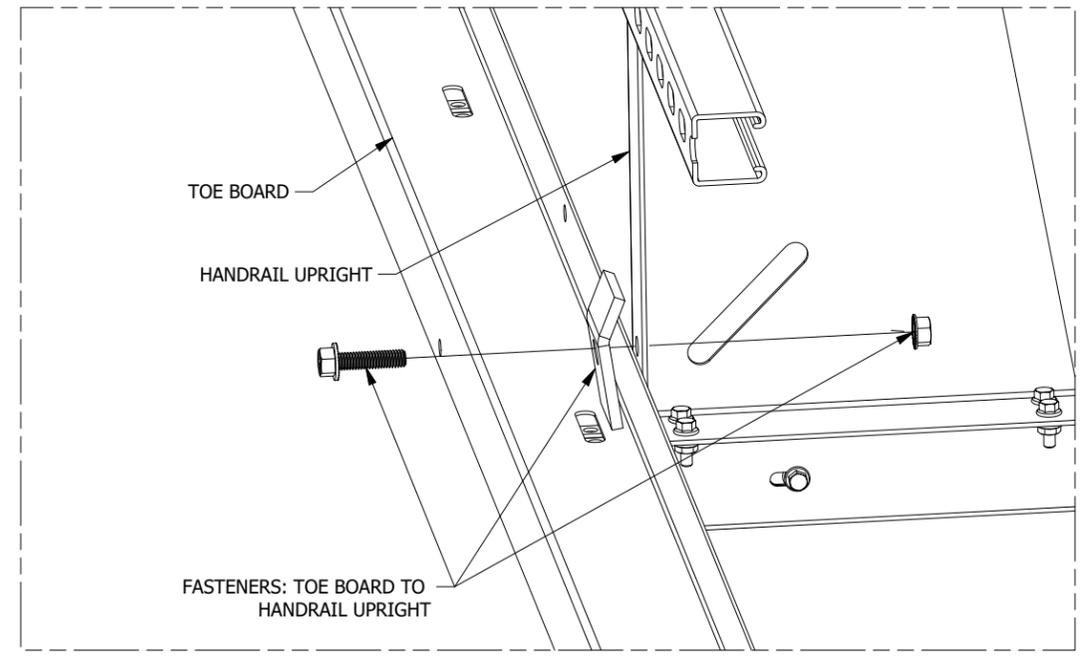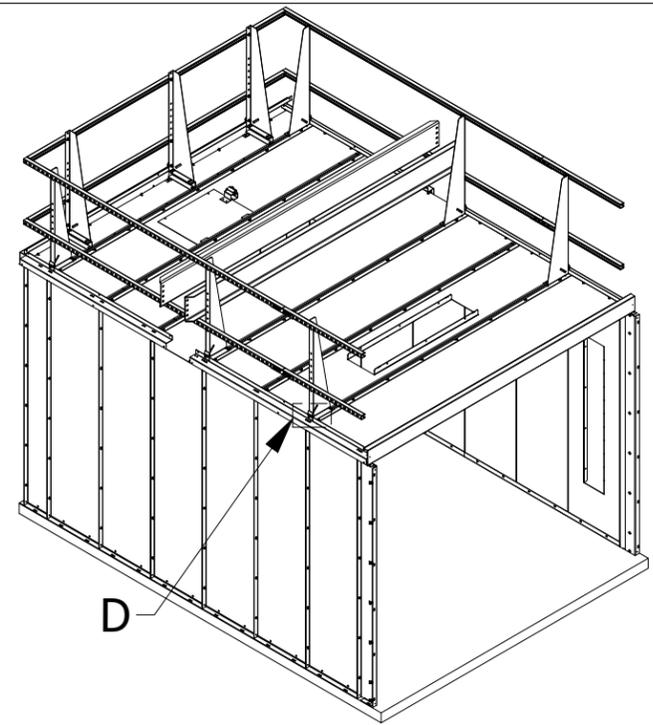



TOE BOARD TO UPRIGHT DETAIL D

- FREIGHT CAB FASTENER PACK:**
- TOE BOARD TO HANDRAIL UPRIGHT





STEP 4.

- INSTALL ANGLE BRACING TO STIFFEN HANDRAIL SYSTEM
- BOLT END OF SIDE KICKPLATES TO CANOPY FLANGE

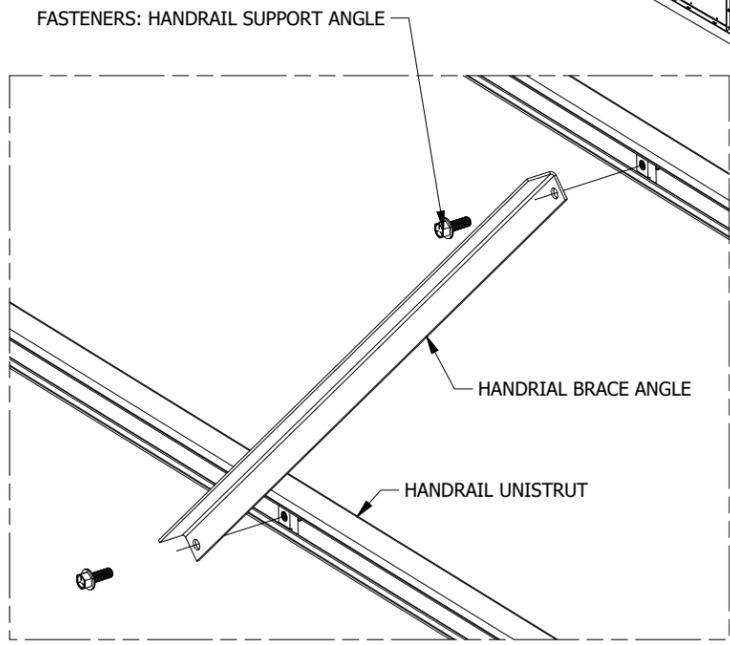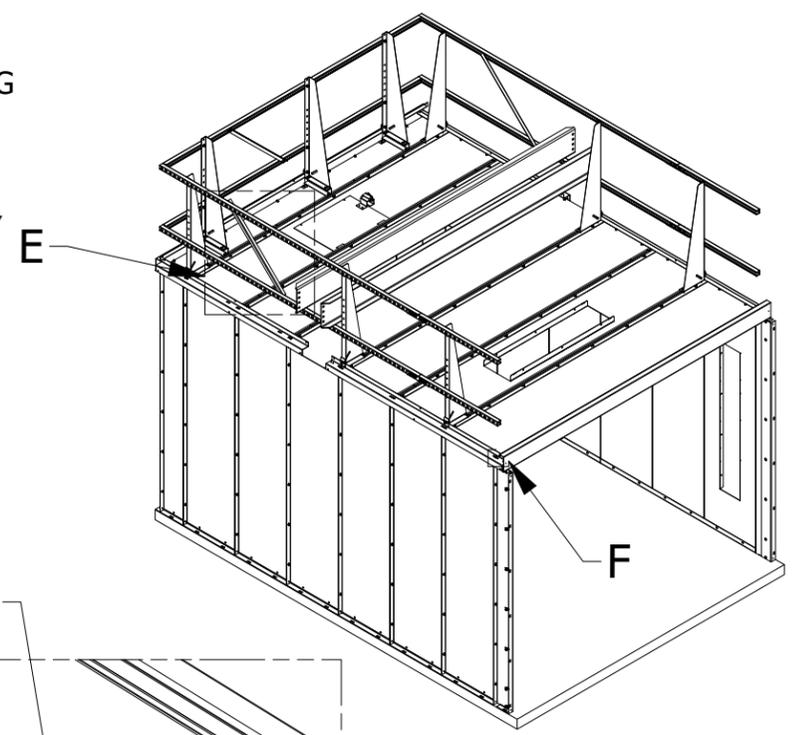


HANDRAIL BRACE ANGLE TO HANDRAIL DETAIL E

- FREIGHT CAB FASTENER PACK:**
- HANDRAIL SUPPORT ANGLE

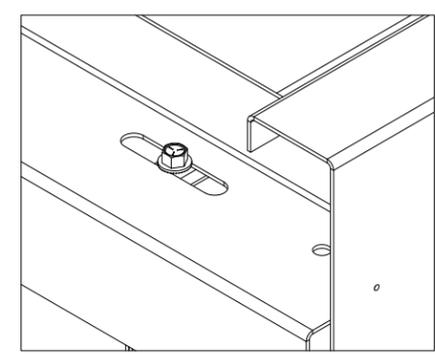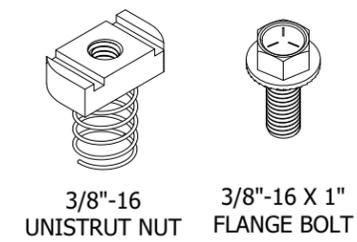

TOE BOARD TO CANOPY DETAIL F

- PASSENGER CAB FASTENER PACK:**
- TOE BOARD TO CANOPY

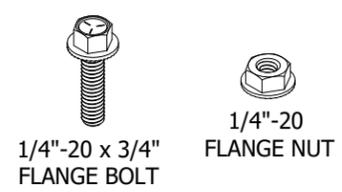

SCAN OR CLICK QR CODE BELOW TO VIEW INSTALLATION VIDEO PERTAINING TO YOUR CAB TYPE

FREIGHT CAB CAR TOP HANDRAIL INSTALLATION VIDEO

